



Which Gateway When?

460 series

To a....

Connect Your...	To a....																					
	EtherNet/IP Adapter	EtherNet/IP Scanner	Allen-Bradley PLC	PROFINET Client	Modbus TCP/IP Server	Modbus TCP/IP Client	Modbus RTU Slave	Modbus RTU Master	DeviceNet Master	DeviceNet Slave	BACnet/IP Client	BACnet/IP Server	BACnet MS/TP Master	BACnet MS/TP Slave	LON	PROFIBUS Master	Ethernet TCP/IP ASCII	Serial ASCII	USB	DF1 Master	Web Interface	
EtherNet/IP Adapter	ECES	ECETC	ECPS	ECMC	ECMS	ECMM	ECMRS	ECDS	ECDM	ECBS	ECBC	ECBMS	ECBM	ECLN	ECPBS	ECTCP	ECA	ECUSB	ECDFM			
EtherNet/IP Scanner		ESETC	ESPS	ESMC	ESMS	ESMM	ESMRS	ESDS	ESDM	ESBS	ESBC	ESBMS	ESBM	ESLN	ESPBS	ESTCP	ESA	ESUSB	ESDFM	ESWI		
Allen-Bradley PLC			ETCPS	ETCMC	ETCMS	ETCMM	ETCMRS	ETCDS	ETCDM	ETCBS	ETCBC	ETCBMS	ETCBM	ETCLN	ETCPBS	ETCTCP	ETCA	ETCUSB	ETCDFM	ETCWI		
PROFINET Client				PSMC	PSMS	PSMM	PSMRS	PSDS	PSDM	PSBS	PSBC	PSBMS	PSBM	PSLN	PSPBS	PSTCP	PSA	PSUSB	PSDFM	PSWI		
Modbus TCP/IP Server					MCMS	MCMM	MCMRS	MCDS	MCDM	MCBS	MCBC	MCBMS	MCBM	MCLN	MCPBS	MCTCP	MCA	MCUSB	MCDFM	MCWI		
Modbus TCP/IP Client						MSMM	MSMRS	MSDS	MSDM	MSBS	MSBC	MSBMS	MSBM	MSLN	MSPBS	MSTCP	MSA	MSUSB	MSDFM	MSWI		
Modbus RTU Slave							MMRS	MMDS	MMDM	MMBS	MMBC	MMBMS	MMBM	MMLN	MMPBS	MMTCP	MMA	MMUSB	MMDFM	MMWI		
Modbus RTU Master								MRSDS	MRSDM	MRSBS	MRSBC	MRSBMS	MRSBM	MRLN	MRSPBS	MRSTCP	MRSA	MRSUSB	MRSDFM	MRSWI		
DeviceNet Master										DSBS	DSBC	DSBMS	DSBM			DSTCP	DSA		DSDFM			
DeviceNet Slave										DMBS	DMBC	DMBMS	DMBM			DMTCP	DMA		DMDFM			
BACnet/IP Client														BSLN	BSPBS	BSTCP	BSA	BSUSB	BSDFM	BSWI		
BACnet/IP Server														BCLN	BCPBS	BCTCP	BCA	BCUSB	BCDFM			
BACnet MS/TP Master														BMSLN	BMSPBS	BMSTCP	BMSA	BMSUSB	BMSDFM			
BACnet MS/TP Slave														BMLN	BMPBS	BMTCP	BMA	BMUSB	BMDFM			
LON																LNTCP	LNA		LNDFM			
PROFIBUS Master																PBSTCP	PBSA		PBSDFM			
Ethernet TCP/IP ASCII																	TCPA	TCPUSB	TCPDFM			
Serial ASCII																		AUSB	ADFM			
USB																				USBDFM		
DF1 Master																						
Web Interface																						

Questions? Call the RTA Solutions Team at 800-249-1612.